
Setting the Computer BIOS (CMOS)


This procedure applies only to systems with the Intel 915GAG Motherboard.


Note: In the BIOS screens, use the left and right arrow keys $(\rightarrow \leftarrow)$ to move between the menus listed at the top of the screen, and the up and down arrow keys $(\uparrow\downarrow)$ to move up and down between menu items, and to change settings for selected items.

- 1. Press the **F2** key during boot. The BIOS Setup Utility Main Menu will appear.
- 2. Use the left and right arrow keys $(\rightarrow \leftarrow)$ to select the **Exit** menu.
- Use the up and down arrow keys (↑↓) to select Load Optimal Defaults, and press Enter. A confirmation box will appear. With Ok selected, press Enter.

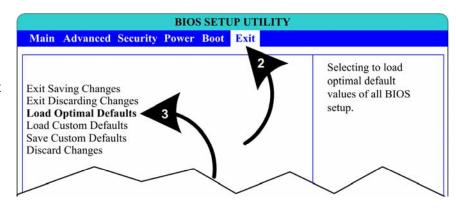


- 4. Use the left and right arrow keys $(\rightarrow \leftarrow)$ to select the **Boot** menu.
- Use the up and down arrow keys (↑↓) to select Boot Device Priority, and press Enter. A device list will appear.
- 6. Use the up and down arrow keys (↑↓) to select 1st Boot Device, and press Enter. A pop-up window will appear. Use the up and down arrow keys (↑↓) to select the CD-ROM drive, and press Enter. The hard drive will automatically be set as the 2nd Boot Device. Press the Esc key to exit from the submenu.

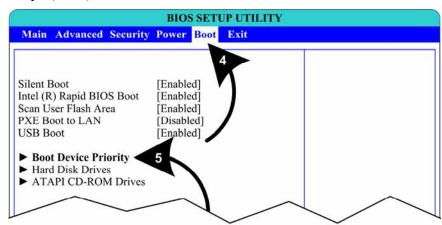


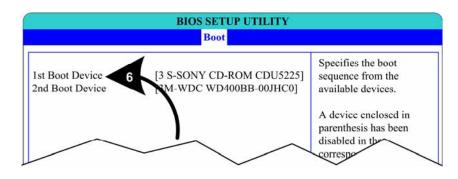

- 7. Use the left and right arrow keys $(\rightarrow \leftarrow)$ to select the **Power** menu.
- 8. Use the up and down arrow keys (↑↓) to select **After Power Failure**, and press **Enter**. A popup window will appear. Use the up and down arrow keys (↑↓) to select **Power On**, and press **Enter**.

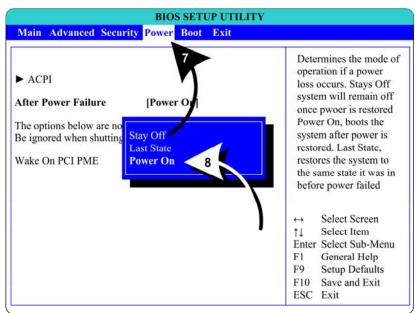

- 9. Use the left and right arrow keys $(\rightarrow \leftarrow)$ to select the **Advanced** menu.
- 10. Use the up and down arrow keys $(\uparrow\downarrow)$ to select Floppy Configuration, and press **Enter**. The Floppy Configuration menu will appear. Use the up and down arrow keys $(\uparrow\downarrow)$ to select Diskette Controller, and press **Enter**. Use the up and down arrow keys $(\uparrow\downarrow)$ set the Diskette Controller to **Disabled**. and press **Enter**. Press the **Esc** key to exit from the submenu.

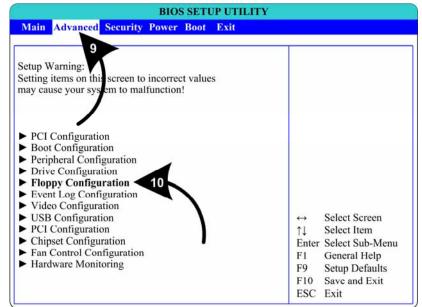

11. Now that all settings are correct, press **F10**. The following prompt will appear:

Save configuration changes and exit now?

[Ok] [Cancel]

12. Make sure **Ok** is selected (use the arrow keys to select if necessary) and press **Enter**.