

P52
P51

LEFT SPEAKER
+12VDC
KEY
GND
NIC
RIGHT SPEAKER

J8

LAMP1 RUN
LAMP1 JUMP
LAMP2 RUN
LAMP2 JUMP

J6

GND
KEY
+5VDC
+12VDC
GND

J5

J7

LOCKOUT
COIN METER
P1 LPT (TICKET METER)
P2 RHT (")
KEY
LFT TICKET DISP (P1)
RHT TICKET DISP (P2)

J4

RESET 2
FOR CONTROL
PANEL

GND
PIY1 RUN
PIY1 JUMP
PIY2 RUN
PIY2 JUMP
PIY1 RESET
PIY2 RESET

J3

GND
COIN 2
COIN 1
P1 NOTCH
P2 NOTCH

TICKET DISPENSOR

0046
24 COMPONENTS
FOX

