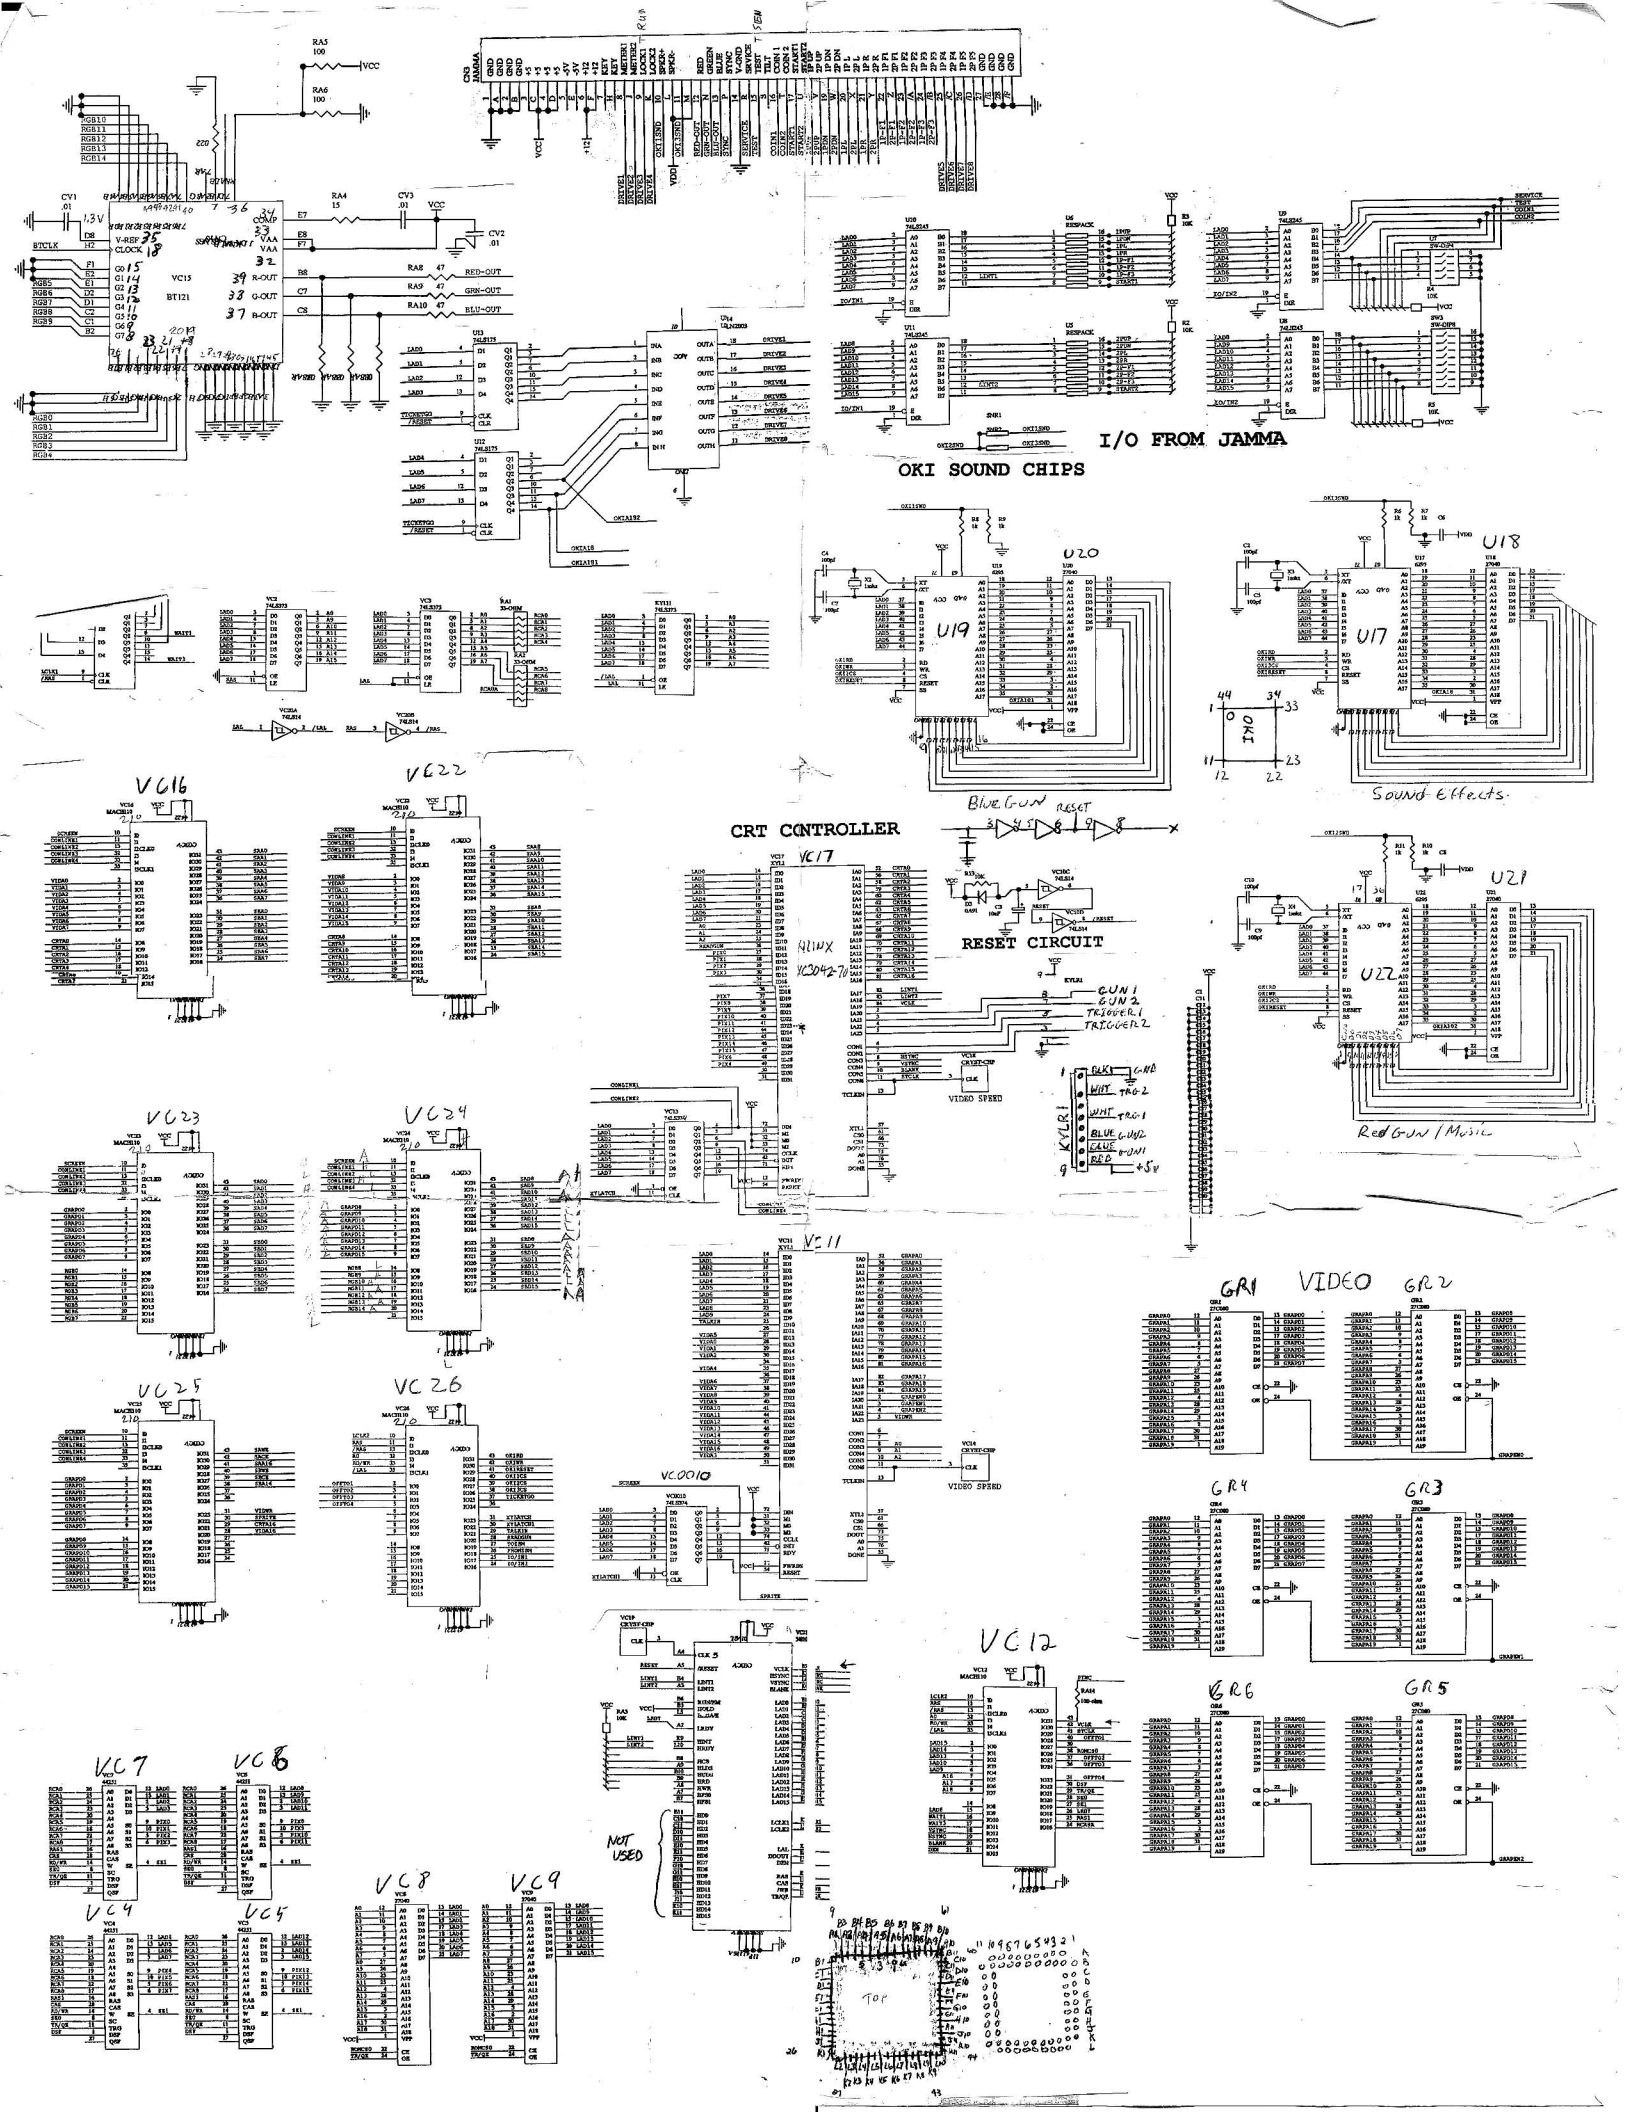
I/O FROM JAMMA
OKI SOUND CHIPS
CRT CONTROLLER
RESET CIRCUIT
VIDEO SPEED
Sound Effects
Red Gun / Music
VC16
VC22
VC23
VC24
VC25
VC26
VC11
VC12
VC7
VC6
VC4
VC5
VC8
VC9
GR1 VIDEO
GR2
GR4
GR3
GR6
GR5
NOT USED
Top